 



 
 


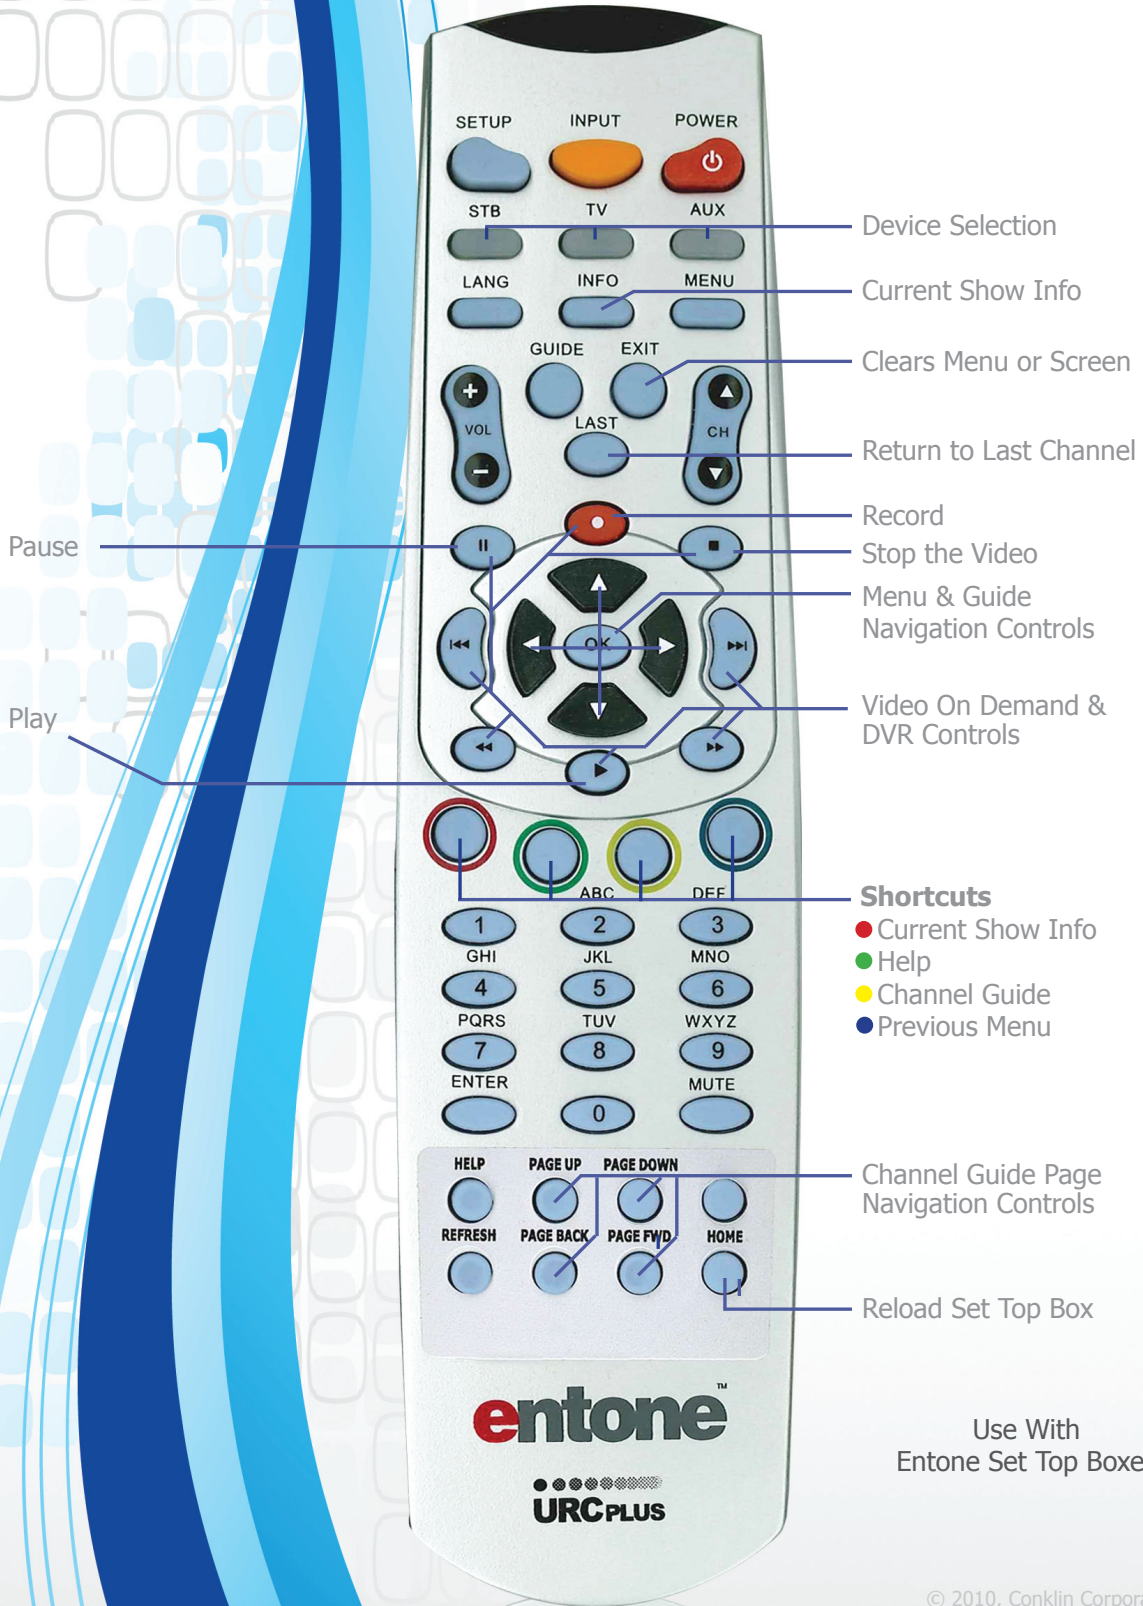







 






 












XIT Communications' IPTV service provides you with MORE of what you enjoy... MORE news, weather, sports, children's channels, music, movies, drama and programming for all audiences. If you love to be entertained, you'll love **XITV**



Use With Entone Set Top Boxes

ENTONE REMOTE CONTROL BUTTON FUNCTIONS

BUTTON		FUNCTION
BLUE SETUP BUTTON		Used for programming the remote functions.
ORANGE INPUT BUTTON		Used to locate video stream input source or as directed by XIT personnel.
	POWER	Power on/off the TV and STB.
	STB	Activate the set top box (STB) mode on the remote control.
	TV, AUX	TV = TV AUX = Activate alternate modes on the remote control.
	LANG	Not an active button at this time.
	INFO	Displays current show information.
	MENU	Display the Main Menu.
	GUIDE	Display the interactive Channel Guide.
	EXIT	Clear the menu or screen.
	LAST	Return to previous TV Channel.
+ / -	VOL	Raise or lower TV volume.
+ / -	CH	Change the channel number up or down.
MENU NAVIGATION		
	ARROW	Navigate among selectable items on the screen.
	OK	Select a highlighted item.
CHANNEL GUIDE CONTROLS		
	CH UP/DOWN	Change the channel number up or down.
	CH BACK/FWD	Display previous or next channel time period.
	REWIND/FAST FWD	Jump to previous or next day.
VOD/RECORDED PROGRAM (DVR) CONTROLS		
	PLAY	Play video. Resume normal play from Rewind, Fast Fwd, or Pause .
	STOP	Stop video.
	RECORD	Record a program. Press red button with white dot then OK > OK to record.
	PAUSE	Pause the video or recorded program. (Press  to resume where you paused).
	REWIND	Rewind video or recorded program.
	FAST FWD	Fast forward through video or recorded program. Press repeatedly to increase speed. In the channel guide fast forward will display the next day.
SHORTCUTS		
	INFO	Display current show information.
	HELP	Not an active button at this time.
	CH GUIDE	Channel Guide
	PREVIOUS	Must be in a menu or window, this is a "Back" button. Displays previous menu or window.
NUMBER BUTTONS		
1, 2...0	NUMBER	Select channel or enter login password.
	MUTE	Mute the volume. Press again to resume previous volume setting.
LAST TWO ROWS (where sticker has been applied)		
	HELP	Display HELP.
	PG UP/DOWN	Display previous or next group of channels
	PG BACK/FWD	Display previous or next time period.
	HOME	Reload the set top box.
	REFRESH	Not an active button at this time.