



PROGRAMMING THE SRC-350A REMOTE CONTROL

To program your remote control, position yourself in front of the main TV and set-top box. Make sure the TV and set-top box are turned on. With the remote in hand follow these simple steps.

ACQUIRE THE GATEWAY ID NUMBER:

1. Press the menu or tool icon button on the set-top box.
2. Use the "channel dn" or ▼ button on the set-top box to scroll down to the REMOTE CONTROL SET-UP.
3. Press the "Select" or ✓ icon button on the set-top box.
4. With the remote control directed to the set top box press the PPV button on the remote.
5. You will see on the TV screen – This Gateway requires a Gateway ID of: XXX
6. Write the number down, you will need it during STEP 2 below.
7. Press the menu or tool icon button TWICE to clear the image on the TV screen.



REMOTE CONTROL SRC-350A

STEP 1 VIDEO STREAM

The remote should be directed toward the set-top box:

This will set up the correct video stream for the remote that is being programmed.

- PRESS and HOLD the Select and Mute button on your remote at the same time until the LED indicator turns red and release.
- PRESS the red "A" button, then the number (1, 2, or 3) that corresponds to the correct video stream being programmed.
 - 1 – If TV is on Channel 3
 - 2 – If TV is on Channel 10
 - 3 – If TV is on Channel 13

STEP 2 GATEWAY ID

The remote should be directed toward the set-top box:

This step will program the Gateway ID (source code) into the remote that is being programmed.

- PRESS and HOLD the Select and Mute button on your remote at the same time until the LED indicator turns red and release.
- PRESS the green "B" button and then press the numbers on the remote to match the Gateway ID. The Gateway ID numbers will briefly appear on the TV screen in a blue box.

STEP 3 POWER and VOLUME

The remote should be directed toward the TV:

This step will program the remote to power the TV on and off and adjust the volume. This step requires the use of the UP arrow button that is located above the SELECT button on your remote.

- PRESS and HOLD the Select and Mute button on your remote at the same time until the LED indicator turns red and release.
- PRESS and release the ▲ button until the TV turns OFF. This may take SEVERAL times of simply pressing and releasing the ▲ button. (DO NOT PRESS & HOLD on this step).
- Once the TV turns OFF, press the SELECT button on the remote to save. Your remote should now be programmed to power the TV on or off and adjust the volume.